
LE London Engineers Company

HOW TO LOOK AFTER YOUR KITCHEN LUXURIES



WHY TO LOOK AFTER YOUR KITCHEN LUXURIES

YOUR LUXURY KITCHEN APPLIANCE – an oven, stove, or extractor hood – is a masterpiece in your possession. It attracts admiring glances, inspires you for great cooking ideas, and serves you faithfully. So, do not neglect it. Proper care will benefit you in many ways:

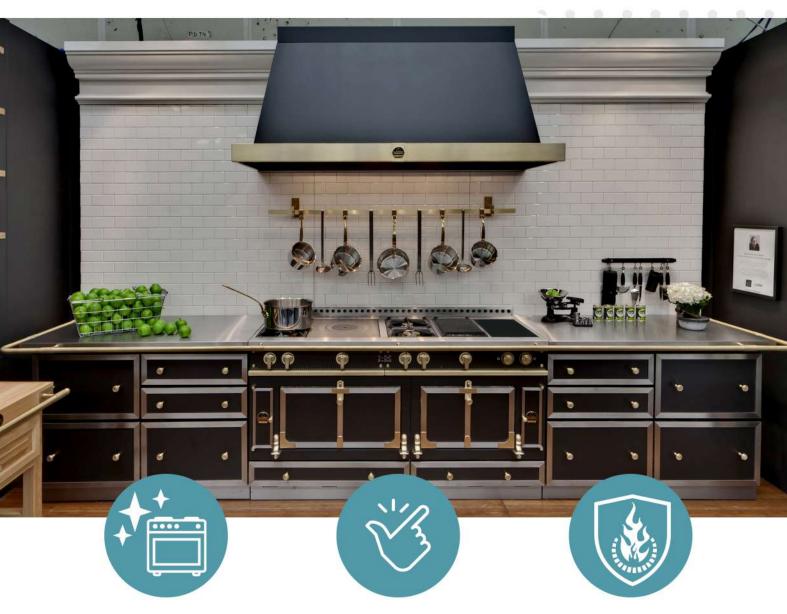

Keeps up flawless look of your appliance

Uphold its performance at the highest level Prevents any fire hazards



This guide helps you perform daily care and deep-in cleaning to maintain your luxury efficiency and appearance.

GENERAL CLEANING TIPS:



Wipe up any spills, cooking grease, and boil-overs as they occur to prevent them burning

Clean appliance regularly

Always leave elements and areas that heat up to cool before cleaning them

Choose cleaning products according to the surfaces to be cleaned

Do not mix different cleaning products as they may react together

Avoid surplus water seeping into the appliance



HOW TO CLEAN OVENS AND GRILLS



Parts	Finish materials	Cleaning products to use
Inside walls Grills / grill pans	Enamel	A cleaner that is harmless for enamel. Soft soap diluted in warm water Liquid detergent for a dishwasher
Oven panels	Self-cleaning enamel	Soft soap diluted in hot water A nylon scourer for stubborn stains removal
Shelves and handyrack	Chrome	A cleaner that is harmless for chrome Liquid detergent for a dishwasher

WARNING! DO NOT USE!



Paint solvents



Washing soda



Caustic and abrasive cleaners



Chlorine based cleaners




Abrasive sponges

HOW TO CLEAN HOTPLATES



Parts	Finish materials	Cleaning products to use
Hob Tops	Enamel / Stainless steel	A mild detergent or soft soap, diluted in hot water. A nylon scourer for stubborn stains removal
Ceramic/Induction hobs	Toughened glass	Soft soap diluted in hot water Cream cleaner if necessary
Electric Hob Plates	Cast iron	A well soaped steel wool pad for rust and food debris removal
Griddle Plates	Non-stick surface	Soft soap diluted in hot water Liquid detergent for a dishwasher

HOW TO CLEAN COOKTOP BURNERS

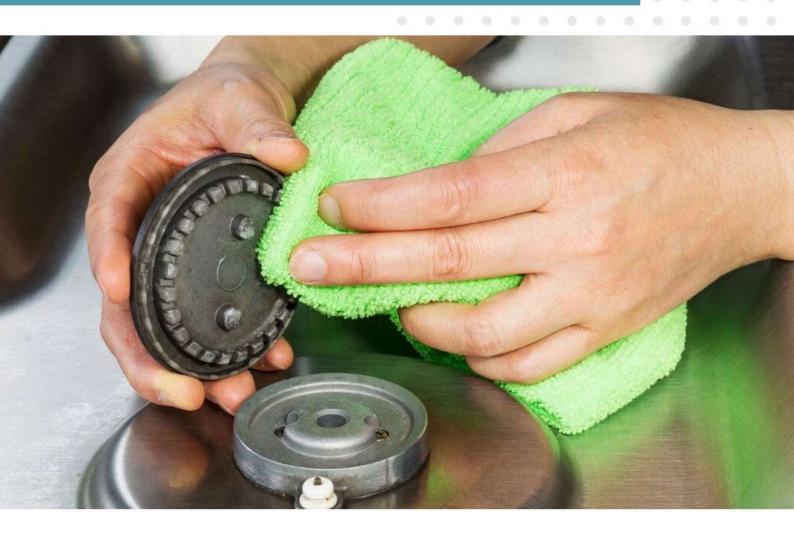



Remove a burner head



Dry it before replacing



Soak it for 5 minutes in solution prepared with 1 cup of water and 1 tbsp of white vinegar



Check the burner ports for blockages and remove them if any



Clean it with a soft cloth and rinse



Replace a burner head back



Make sure it is located properly and do not cut off the air access

HOW TO CLEAN RANGE AND OVEN EXTERIOR



Parts	Finish materials	Cleaning products to use
Sides and plinths	Painted surface	A mild detergent or soft soap, diluted in hot water. A nylon scourer for stubborn stains removal
Doors and storage drawer exterior	Enamel or paint	Soft soap diluted in hot water A liquid detergent for stubborn stains removal
	Stainless steel	A mild detergent or soft soap, diluted in hot water. White spirit
Door glass Glass Lids	Toughened glass	Soft soap diluted in hot water Cream cleaner
Control panels	Paint, enamel or stainless steel	Soft soap diluted in hot water Liquid detergent for a dishwasher
Control handles	Plastic/chrome or copper	Soft soap diluted in warm water
Splashbacks Rear grilles	Enamel or stainless steel	A mild detergent or soft soap diluted in hot water. Cream cleaner
Decorative inserts	Copper / Brass	Special copper cleaning products / Brass polish, a soft cloth

HOW TO CLEAN EXTRACTOR HOODS



Parts	Finish materials	Cleaning products to use
Grease filter / filter grid	Aluminium Stainless steel	A mild detergent, soft soap, or dishwasher diluted in hot water
Exterior	Colored enamel	Window-cleaning products
	Stainless steel	White spirit – for routine cleaning or a finishing touch. A mild detergent or soft soap, diluted in hot water – for deep -in cleaning



